

# CRESTRON CART INSTRUCTIONS

CALL MCS FOR ASSISTANCE  
**(810) 237-6628**

PLEASE DO NOT MOVE, REARRANGE,  
OR DISCONNECT THE MEDIATED CART.

**IF THE TOUCH PANEL IS BLACK, TOUCH IT TO BRING IT OUT OF STANDBY MODE**

## (1) Press the Power button

*This will turn on the projector and lower the electric screen.*

## (2) Turn on needed equipment

*Computer & DVD player are behind the door on front of cart  
Document camera is in a drawer on the side of the cart*

## (3) Select the appropriate source

**PC Button** - Displays the image from the desktop computer located in the cart

**VGA Button** - Displays the image from the VGA input on top of the cart

**HDMI Button** - Displays the image from the HDMI input on top of the cart.

**DVD Button** - Displays the image from the DVD player in the cart as well as a set of controls on the touch panel

**Doc Cam Button** - Displays the image from the document camera in the side drawer of the cart

**Audio Source Control** - Located at the lower right of the touch panel, this allows you to choose your audio source.  
*(EX: Displaying the doc cam but using audio from computer)*

## (4) Other controls

**Volume Control** - Arrow buttons to the right of the touch screen allow you to adjust the volume

**AV Mute button** - Located at the top left, this will mute/turn off the projected image

**Make sure to shutdown equipment when finished!**

## (5) Turn off used equipment


## (6) Press the power button in the top right corner, and then select yes

*This will turn off the projector and raise the electric screen*


BEGINNING SCREEN



MAIN SCREEN + DVD/VCR CONTROLS

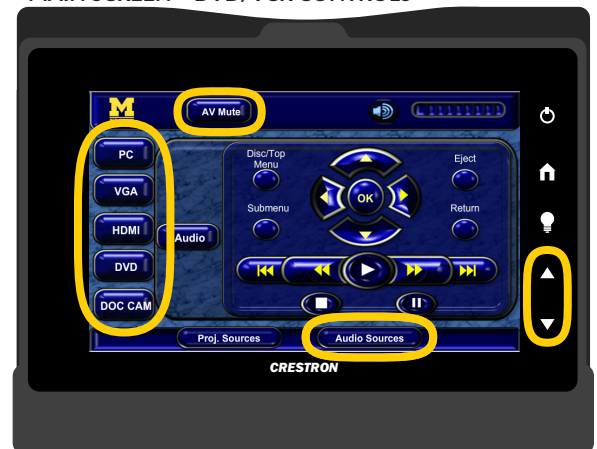

SHUTDOWN SCREEN

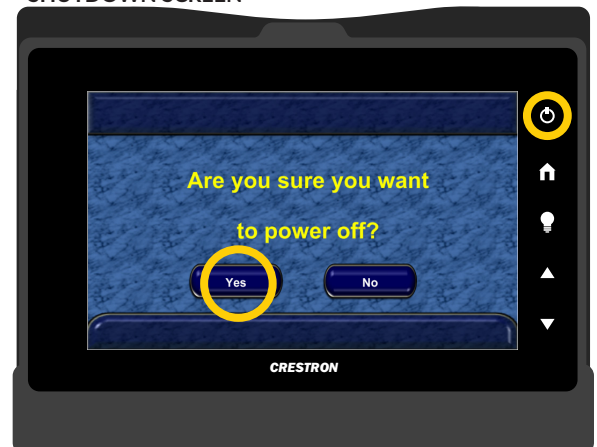

# DOC. CAMERA INSTRUCTIONS

CALL MCS FOR ASSISTANCE  
**(810) 237-6628**

PLEASE DO NOT MOVE, REARRANGE,  
OR DISCONNECT THE MEDIATED CART.

## Using the Document Camera:

- (1) If camera arm is down release using the lever at the base
- (2) Turn the document camera on (or off) by pressing the **power button**
- (3) Place the item to be shown on the stage of the document camera
- (4) Check that the projector is set to display the document camera
- (5) To show solid objects, press the **lamp button**. Transparencies are best viewed with the upper lamps, not the base lamp

**Please turn the document camera off when finished**

## To Resize Image:

- (1) Press the **plus button** to increase the size of the image
- (2) Press the **minus button** to decrease the size of the image

## To Focus on Image:

- (1) If the image is not in focus, press the **auto focus button** to refocus on the image

*Note: The following objects may not focus well using the auto focus feature*

- Objects with little contrast
- Objects with a bright background or excessive contrast

